

Epson OEM-Nr.	T007	T036	T040	T041	T050	T051	T052	T0441	T0442	T0443	T0444	T0481	T0482	T0483	T0484	T0485	T0486	T0551	T0552	T0553	T0554	T0611	T0612	T0613	T0614	T0711/ T0891	T0712/ T0892	T0713/ T0893	T0714/ T0894	T0801	T0802	T0803	T0804	T0805	T0806			
AgfaPhoto Nr.	APET007B	APET036B	APET040B	APET041C	APET050B	APET051B	APET052C	APET044B	APET044C	APET044M	APET044Y	APET048B	APET048C	APET048M	APET048Y	APET048LC	APET048LM	APET055B	APET055C	APET055M	APET055Y	APET061B	APET061C	APET061M	APET061Y	APET071/ T089B	APET071/ T089B	APET071/ T089M	APET071/ T089Y	APET080B	APET080C	APET080M	APET080Y	APET080LC	APET080LM			
Stylus 400																																						
Stylus C42/UX/SX, C44UX, C46																																						
Stylus C62																																						
Stylus C64/PE, C66, C84/PE, C86/PE																																						
Stylus CX3200																																						
Stylus CX3600, CX3650, CX4600, CX6400, CX6600																																						
Stylus D68/PE																																						
Stylus D78																																						
Stylus D88/PE/plus																																						
Stylus D92																																						
Stylus D120																																						
Stylus DX3800, DX3850																																						
Stylus DX4000, DX4050																																						
Stylus DX4200, DX4250																																						
Stylus DX4400, DX4450																																						
Stylus DX4800, DX4852																																						
Stylus DX5000, DX5050																																						
Stylus DX6000, DX6050																																						
Stylus DX7000F, DX7400, DX7450																																						
Stylus DX8400, DX8450																																						
Stylus DX9400F																																						
Stylus S20																																						
Stylus SX100, SX105, SX200, SX205, SX400, SX405, SX600FW																																						
Stylus BX300F, BX600FW																																						
Stylus Photo R200, R220																																						
Stylus Photo R240, R245																																						
Stylus Photo R265, R285																																						
Stylus Photo R300/M, R320, R340																																						
Stylus Photo R360																																						
Stylus Photo RX420, RX425																																						
Stylus Photo RX500																																						
Stylus Photo RX520																																						
Stylus Photo RX560, RX585																																						
Stylus Photo RX600, RX620, RX640																																						
Stylus Photo RX685																																						
Stylus Photo PX700W, PX800W																																						
Stylus Photo 700, 710, 720																																						
Stylus Photo 790, 870, 875DC, 890, 895, 900, 915, 1270, 1280, 1290/S																																						
Stylus Photo 1200, EX, EX2																																						
Stylus Color 400, 440, 460																																						
Stylus Color 500																																						
Stylus Color 600, 640, 660, 670																																						
Stylus Color 740																																						
Stylus Color 760, 800 - 860, 1160, 1520																																						
Stylus Scan 2000, 2500																																						

Canon OEM-Nr.	BCI-3bk	BCI-3ebk/6bk	BCI-3ec/6c	BCI-3em/6m	BCI-3ey/6y	BCI-3pc/6pc	BCI-3pm/6pm	BCI-24bk	BCI-24c	PGI-5bk	CLI-8bk	CLI-8c	CLI-8m	CLI-8y	CLI-8pc	CLI-8pm	PG-40bk	CLI-41c	PGI-5210bk	CLI-8bk	CLI-521c	CLI-521m	CLI-521y
AgfaPhoto Nr.	APCBCI3B	APCBCI6B	APCBCI3C	APCBCI3M	APCBCI3Y	APCBCI3PC	APCBCI3PM	APCBCI24BK	APCBCI24C	APCPGI5B	APCCLI8B	APCCLI8C	APCCLI8M	APCCLI8Y	APCCLI8PC	APCCLI8PM	APCPG40B	APCCL41C	APCPGI521B	APCCLI521B	APCCLI521C	APCCLI521M	APCCLI521Y
Printer model																							
BJC-2000, BJC-2100, BJC-4000 series, BJC-5000, BJC-5100, BJC-5500																							
BJC-3000 series, BJC-6000, BJC-6100, BJC-6200/S, BJC-6500																							
Bubble Jet S100, S200/x, S300, S330 Photo																							
Bubble Jet S400/X, S450, S4500																							
Bubble Jet S500, S520/X, S530D, S600, S630, S6300, S750																							
Bubble Jet S800, S820/D, S830D, S900, S9000																							
Bubble Jet i250, i320, i350, i450/x, i455, i470D, i475D																							
Bubble Jet i550/X																							
Bubble Jet i560																							
Bubble Jet i850																							
Bubble Jet i865																							
Bubble Jet i6500																							
Bubble Jet i905D, i950, i965, i990, i9100, i9950																							
Pixma iP1200, iP1300, iP1600, iP1700, iP1800, iP2200, iP2500																							
Pixma iP3000, iP4000/R, iP5000																							
Pixma iP3300, iP3500																							
Pixma iP3680																							
Pixma iP4200, iP4300, iP4500																							
Pixma iP4680																							
Pixma iP5200/R, iP5300																							
Pixma iP6000D, iP8500																							
Pixma iP6600D, iP6700D																							